

# Tips, advice and <sup>we</sup> care

Whenever you dress up in this product, avoid stretching or pulling of the material in order not to damage the internal wiring system.

## IMPORTANT INFORMATION - BATTERY

- Consequently, any new battery should never be used before it has been completely charged.
- Remove the battery from the clothing when no longer required.
- The battery must be "summer-stored" in 100% charged condition, due to the built in security print that monitors the cell voltage, it discharges over a longer period (aprox. 1-2% pr. month).
- Make sure that the battery is always fully charged before storage or use.

## CHARGING/USE

- For proper and safe use - make sure that only the supplied Nordic Heat® battery are used.
- LED light blinking = charging.  
Constant 4 LED lights = fully charged.

## STORAGE

- Charge the batteries 100% before long lasting storage  
- Recharge at least once a year.
- Always store in a cool and dry place, away from sources of strong heat or open fire.
- Our high quality Li-on batteries, will like any other battery over time undergo reduction of charging capacity.  
Our batteries are guaranteed to last +500 charging cycles.

## AIR TRANSPORT / TRAVEL:

Batteries must ALWAYS be carried in the hand luggage.

## PROTECT THE ENVIRONMENT

Always dispose the battery at recycle station or in an approved battery box.

## WASH & CARE

- Handwash and spot clean followed by hang drying.
- Machine wash 30°C gentle cycle using washbag and with light spin only.
- No fabric softener.
- No wringing or twisting of the clothes.
- Always remove battery before washing :-)

## SAFETY WARNINGS

- The clothes are not to be worn in a wet condition.
- For the safety and protection of the electronic parts, needles or pointed objects are not to be inserted in the clothes.
- Keep clothes away from fire or excessive heat.
- When you remove the battery from the pocket, grab the plug and turn it clock- and counter wise while pulling gently, avoid pulling the cord.

## WARRANTY

- Subject to normal usage, Nordic Heat® extends an all-inclusive 2-year warranty. Damage to fabric, wiringconnections, or battery by misuse, accidents, fire, water, any unauthorized service or negligence is not covered.
- All repairs must be executed by Nordic Heat® Service Center, which invite you always to call ahead with your challenge.
- Should Customer Service be unable to solve the matter on the telephone, the items in questions are to be forwarded to the Service Center.



Nordic Heat ApS · Kratbjerg 240 · DK-3480 Fredensborg · +45 2717 0000  
Service@NordicHeat.dk · NordicHeat.dk - Nordic-Heat.com

# Congratulations on your new Nordic Heat® Base Layer V8

## DEAR CUSTOMER

Thank you for taking the time to read this brief, but important user guidance. By following it, you will ensure optimal benefits of your Nordic Heat® product.

## IMPORTANT INFORMATION!

### Storage and use of Nordic Heat® Lithium-ion batteries

Never use the new battery before it has been charged 100%.

Whenever the battery is to be stored during longer periods, make sure that it is fully charged. Once again when the season starts, it is important that the battery is fully charged before use. This will maintain the battery memory, extend the durability and provide you maximum capacity.

### Product optimization - We recommend:

Turn on the heat **before** you are getting cold, since the technology is designed to keep you warm, and not for warming you up.

NB: The Base Layer gets very hot on high setting!  
We recommend max. 10 min. at a time on high.

If you have any questions, please contact our service team at [service@nordicheat.dk](mailto:service@nordicheat.dk) or +45 2717 0000.

Enjoy your Nordic Heat® product!

Best regards  
The Nordic Heat® Team




# Nordic Heat® Battery heated Base Layer V8 with haptic vibration

Charge the battery with USB-C via 220V or a powerbank before use



LED light blinking = Battery charging  
Constant 4 LED light = Battery fully charged

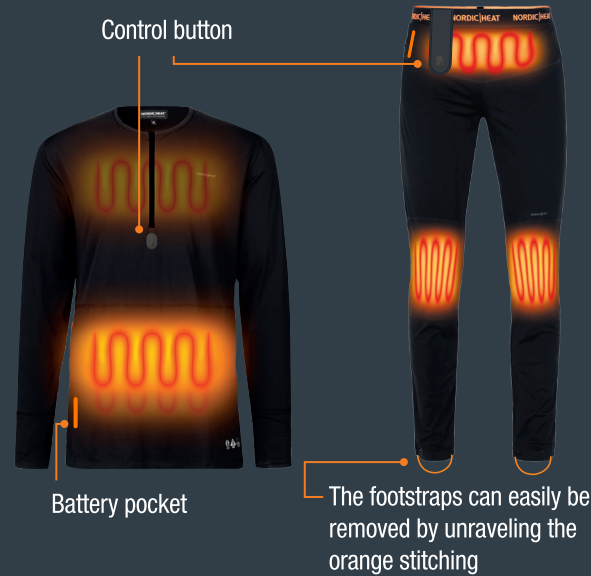

**The control button**  
Manages the On/Off function and desired heat level.  
Flashes shortly when the battery is connected



Haptic vibration / Buzzer  
Feel the future with intuitive haptic feedback/vibration as you switch between heat levels

To turn on/off - press and hold the button for 2 sek.



When the clothing is turned on, it will vibrate 3 times/3 LED = high setting  
- to change temperature, simply press lightly on the button

Heating time approx.:

3 hours  
3 LED = High



7 hours  
2 LED = Medium



10 hours  
1 LED = Low



High setting get's very hot!  
- we recommend max. 10 min. at a time